




Peep Window

FOR EVAPORATOR ARCH DOORS

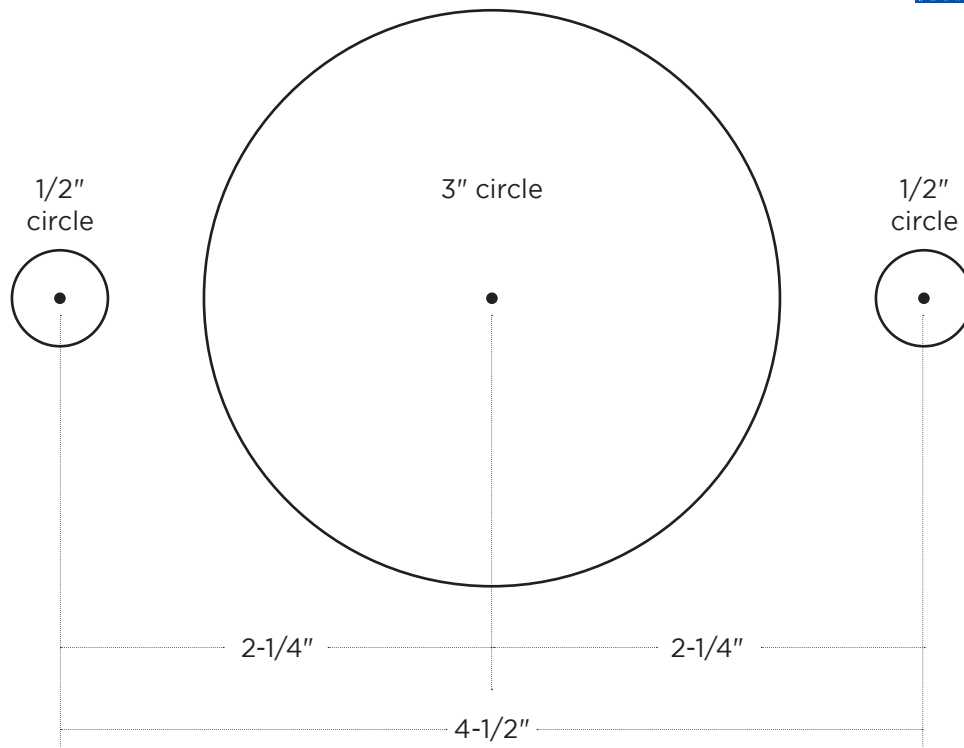

INSTALLATION

- Use the diagram above to draw the hole pattern on your arch door.
- Use a 3" hole cutter to drill the center hole. This is where you will insert the tube of the Peep Window.
- Use a 1/2" drill bit to drill the side holes for the bolts.
- Attach the Peep Window to the door using the bolts and washers provided. Gaskets are **not** required.

INCLUDED HARDWARE

- 3/8" x 1" Bolt - Qty 2 • 3/8" Nut - Qty 2
- 3/8" Washer - Qty 4 • 3/8" Lock Washer - Qty 2



Check Out Our Demo
Video On YouTube.

